

Use & care

ECOPOTS planters are hand-finished, frost- and UV-resistant, lightweight, and suitable indoors and outdoors.

DRAINAGE

Outdoors, remove any included plugs so that water drains and does not freeze and crack the planter in winter. A saucer keeps outdoor surfaces clean.

When used indoors without a saucer, leave the plug in. When used indoors with a saucer, remove the plug.

Once the plug is removed, the planter is no longer waterproof.

PLANTING

For direct planting, loosely fill with preferred soil or a soil mix for the plant, add plant without grow pot, and add final soil. Decorative top dressings such as moss, river rocks, or bark chips may also be added.

Matching round and square saucers are available for most models, including select models with wheels.

REPAIR

Use the ECOPOTS Repair Sponge to refinish a scratched or slightly damaged surface.

CLEANING

Wipe with a damp cloth for general cleaning. Never use chemical or corrosive products.